



CoverBuddy

Installation Instructions

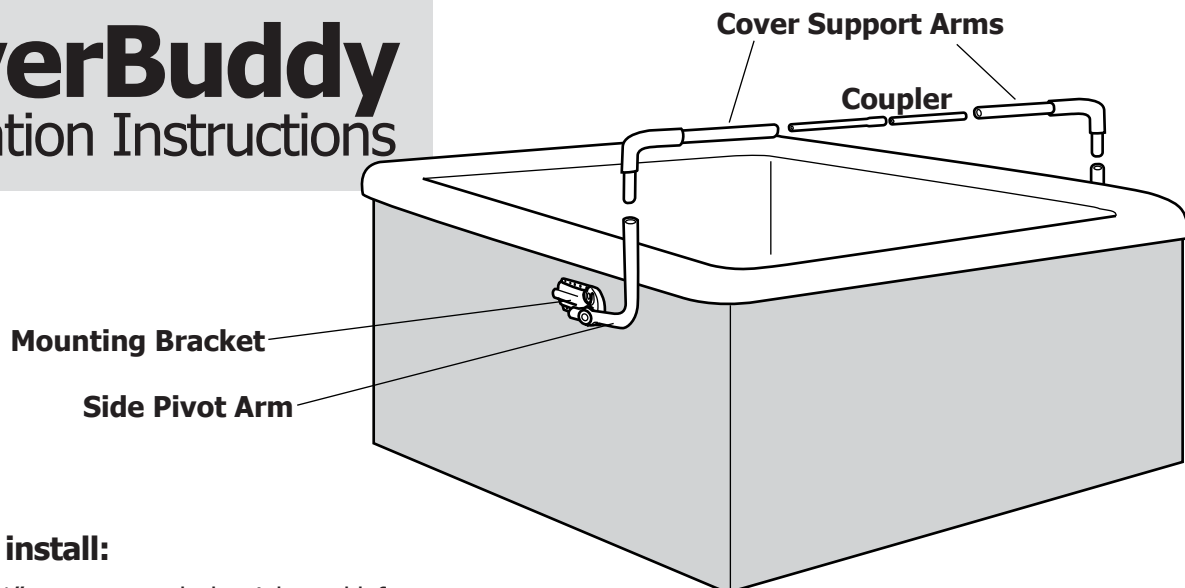


To assemble & install:

- Using the #10 x 1" screws, attach the right and left Mounting Brackets to the appropriate sides of the spa.
CAUTION: to prevent splitting of the wood cabinet, pre-drill holes with a 1/16" drill bit.
Mounting height is optional.

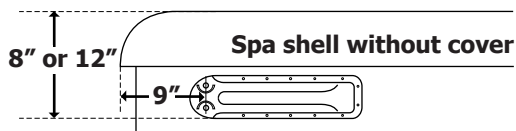

By positioning the Mounting Brackets 8" down from the top of the spa shell, approximately 9" clearance behind the spa will be needed. Mounted at this position, approx. 75% of the spa cover will be standing above the spa surface in the off position. By positioning the Mounting Brackets 12" down from the top of the spa shell, approx. 15" clearance behind the spa will be needed. Mounted at this position, approx. 50% of the spa cover will be standing above the spa surface in the off position.

- Connect the Side Pivot Arms to the Mounting Brackets.

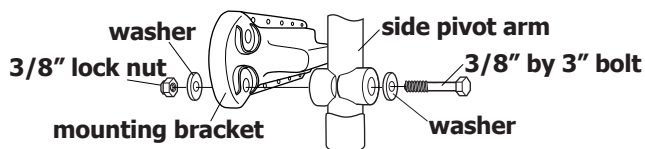

After the Side Pivot Arms are connected, tilt them back to the upright position.

- Position the spa cover (in closed position) on the spa, making sure that all four corners are properly positioned and square on the spa.

To assemble & install (continued):


- Attach the 2 Coupler Bars together with the #8 x 3/4" screws. Insert the Coupler Bars into the Cover Support Arms. Slide the short Cover Support Arms into the Side Pivot Arms.

- Lay the CoverBuddy on the spa cover. Adjust the Coupler Bars and Support Arms so that the Coupler Bars are in parallel to the spa cover hinge and about 1/2" away.



- Using the #10 self-tapping screws, fasten the Cover Support Arms to the Side Pivot Arms and the Coupler. Be sure to rotate the Coupler Bar Pair so that the inserted screws are at a horizontal angle with heads facing the back of the spa.

- Attach the provided 3-hook Towel Rack on the preferred side of your CoverBuddy by simply snapping it into place and inserting the middle self-tapping screw.

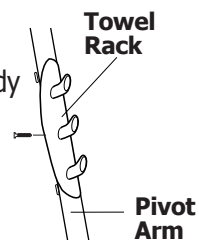


YOU ARE DONE!

CAUTION: do not use the CoverBuddy in high wind conditions (greater than 10 mph). Injury from the spa cover being blown over and impacting the spa user can occur.



CoverBuddy


Instructions pour l'installation

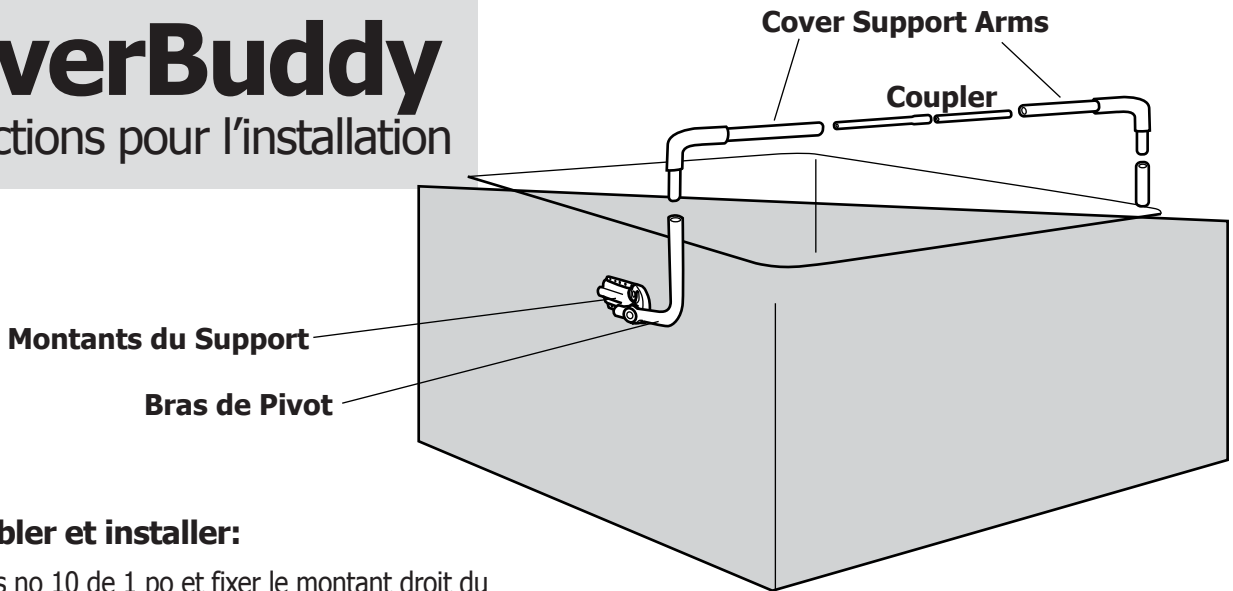

Pour assembler et installer:


1. Utiliser les vis no 10 de 1 po et fixer le montant droit du côté droit et le montant gauche du côté gauche du spa.
ATTENTION : Afin de prévenir tout bris de la structure du spa, percer des trous à l'aide d'une perceuse et d'une mèche 1/16 po

La hauteur du montage est facultative

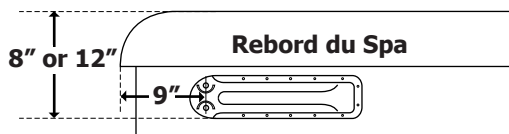

En fixant les montants du support à 8 po du rebord du spa et à 9 po du coin du spa (voir dessin), un dégagement de 9 po derrière le spa sera nécessaire. Environ 75% du couvercle du spa sera au-dessus du spa dans la position de rangement. En fixant les montants du support à 12 po du rebord du spa et à 9 po du coin du spa, un dégagement de 15 po derrière le spa sera nécessaire. Et environ 50% du couvercle du spa sera au-dessus du spa dans la position de rangement.

2. Joignez les bras de pivot aux montants.

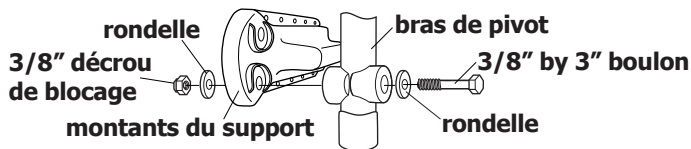


Après les avoir joint, incliner les montants en position verticale.

3. Mettre le couvercle sur le spa, en s'assurant que les bras de pivot sont bien positionnés.


4. Attacher les deux **Coupler Bars** en utilisant les vis #8 X 3/4 po. Insérer les **Coupler Bars** dans les **Cover Support Arms**. Glisser les petits **Cover Support Arms** dans les bras de pivot.

5. Étendre le CoverBuddy sur le couvercle du spa. Ajuster les **Coupler Bars** et les bras du support afin que les Coupler Bars soient parallèles à la charnière du couvercle du spa et à 1/2 po de la charnière.

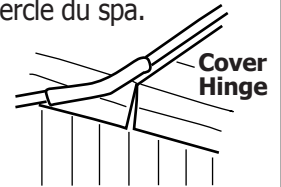

6. Utiliser les vis #10 auto-perceuse, fixer les **Cover Support Arms** aux **Coupler Bars** et par la suite les **Cover Support Arms** aux bras de pivot.

7. Attacher le 3 crochets à serviette du côté désiré du CoverBuddy en le pressant en place et en insérant au la vis au milieu.

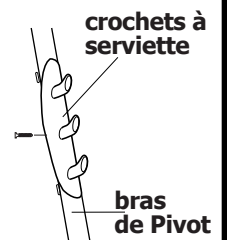

C'est fini!

ATTENTION : ne pas utiliser le CoverBuddy lorsqu'il vente beaucoup (plus de 10mph).

Car il peut se détacher et blesser le couvercle du spa lorsqu'il est soulevé par le vent.

